



ROVE

LINKABLE LINEAR

LINEAR SERIES


INSTRUCTION




1. The fixture should be assembled and installed by registered electricians!
2. Please inform your dealer immediately in case of any parts shortage
3. In case the external soft wire is damaged, it must be replaced by the manufacturer, the qualified distributor or the electrician, to avoid danger.

INSTALLATION OPTIONS

(A)

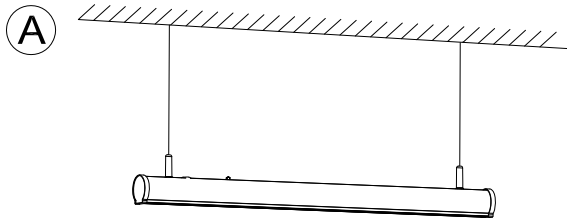


(B)

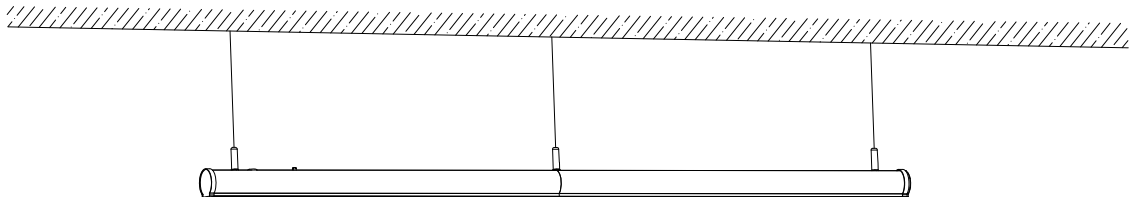



ROVE LINKABLE LINEAR

LINEAR SERIES

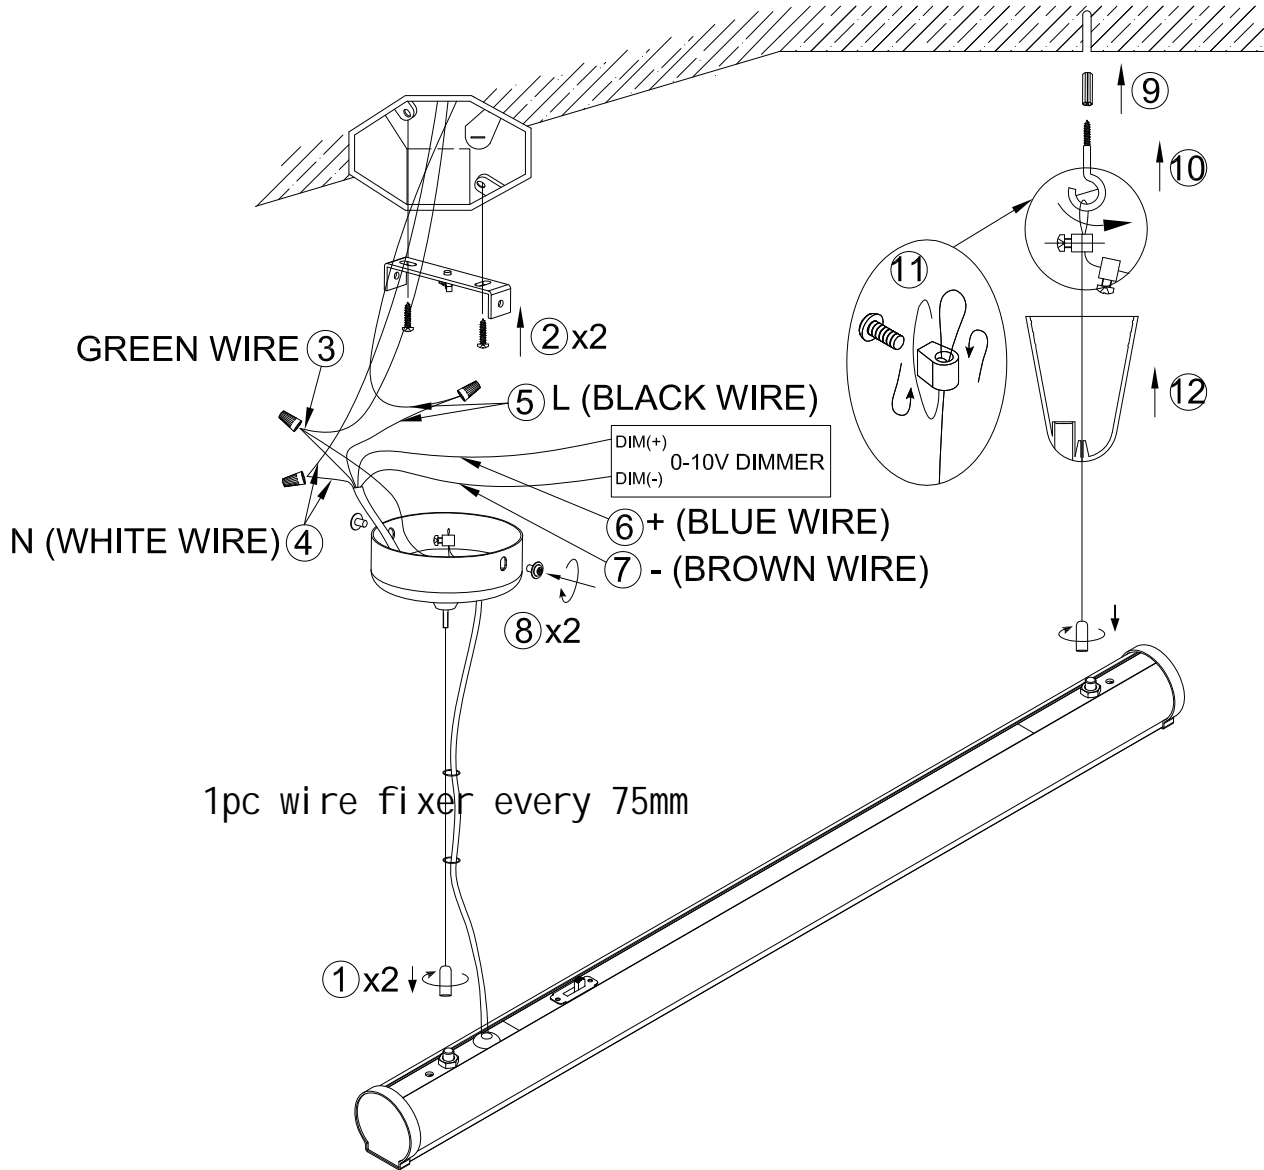



ROVE

LINKABLE LINEAR

LINEAR SERIES

Ⓑ

