





STK STRIKE

INSTALLATION GUIDE


1. Mounting the canopy on the wall

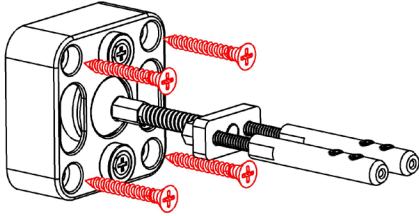


2. Cut off the excess TPV & PC diffused cover

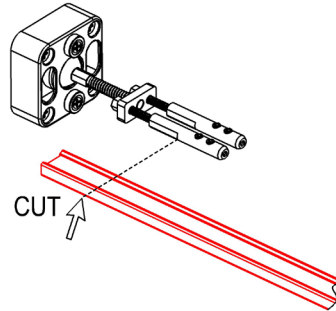


3. Leave a certain length of wire rope

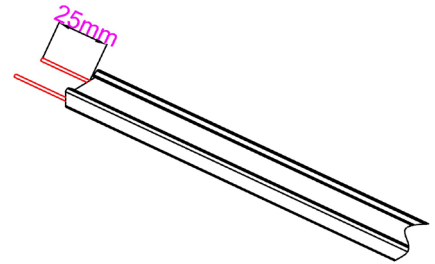


4. Stick the led strip

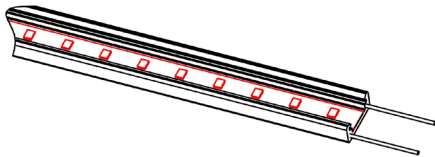


5. Click the PC diffused cover

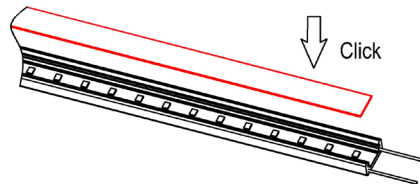


6. Remove the below parts with tool

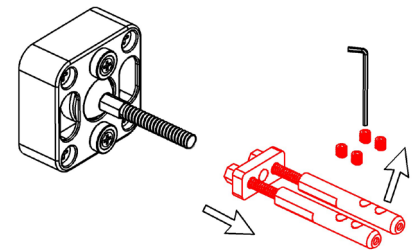


7. Insert the wire rope & lock it tightly

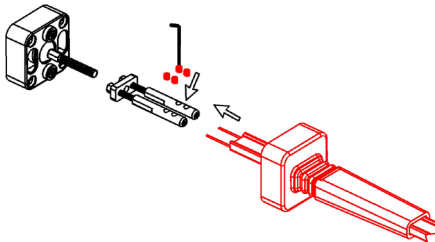


8. Adjust the length of TPV with tool

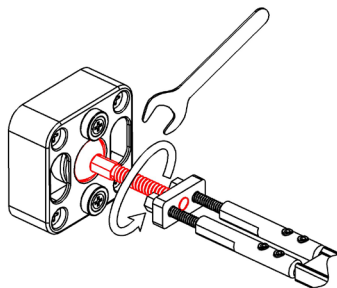

9. Connect the wires with terminals

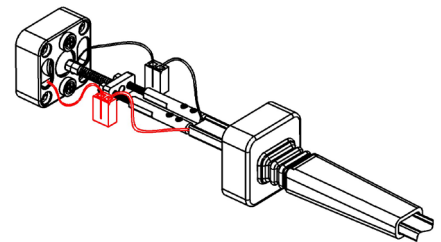

10. Insert the terminals in the canopy

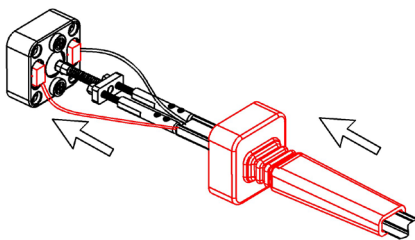

11. Installation completed .

